


SWM8 WITH 2 DVRS

Using SWM1 and SWM2 outputs and no SWM splitter.

www.swm8.com



NOTE: Connect only one line to the HR20/HR21 SWM/FTM/ SAT1 port. Do not use B-Band converters and connect nothing to the SAT2 port.

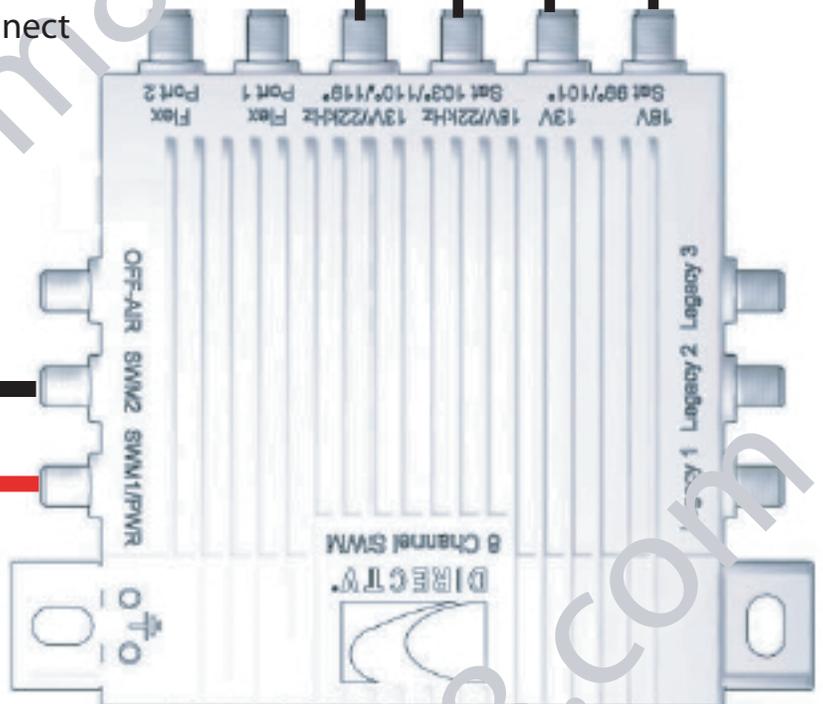

SWM power inserter can typically be installed in the same room as the receiver.



NOTE: Connect only one line to the HR20/HR21 SWM/FTM/SAT1 port. Do not use B-Band converters and connect nothing to the SAT2 port.

